


Quick manual Wetrok Discomatic Samba

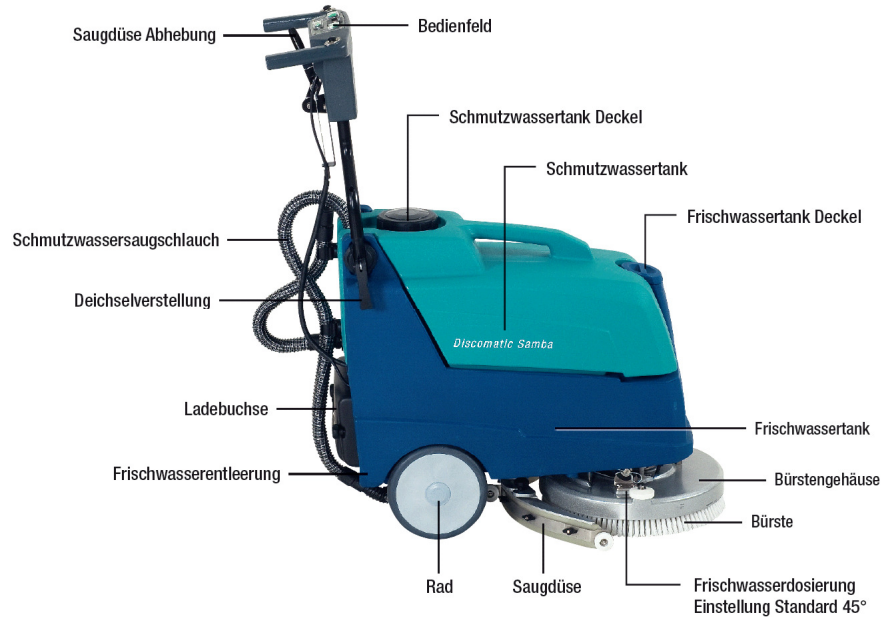

Vor 1. Inbetriebnahme

Batteriekabel zusammen stecken



Batterien laden (ca. 6 h)
Bei grünem Licht ist die Batterie voll geladen



Vor Inbetriebnahme

 
1. Frishwassertank mit Wasser und Chemie auffüllen
(Empfehlung: Wetrok Ecofloor 1%)



2. Deichsel richtig positionieren



3. A) Hauptschalter ON / OFF drücken
B) Saugturbine einschalten
C) Wasser einschalten (leuchtet nur wenn Maschine läuft)



4. Frishwasserdosierung einstellen (normal 45°)
5. Saugdüse absenken



6. Start zum Arbeiten durch drücken und halten vom linken und oder rechten Knopf



Während dem Betrieb

15 Liter Wasser/Chemie reicht bei normaler Wasserdosierung für ca. 25 Minuten

Achtung: Bei jedem Nachfüllen des Frishwassers unbedingt Schmutzwassertank entleeren!

Eine voll geladene Batterie reicht bis zu 60 Minuten (abhängig vom Boden und Bürsten / Pad)

Achtung: Die Batterien müssen geladen werden wenn der rote Strich der Batterieanzeige in der Mitte ist oder die Maschine nicht mehr läuft.



Achtung: Blockiert der Bürstenmotor während der Arbeit muss sofort gestoppt werden und die Batterien müssen geladen werden!

Nach dem Betrieb

Hauptschalter ON / OFF drücken




Bürsten oder Padantriebsscheibe von der Maschine entfernen und reinigen



Saugdüse entfernen und reinigen



Schmutzwassertank entleeren und reinigen. Schmutzwassertank- und Schlauchdeckel offen lagern (damit es trocknen kann)

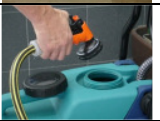

Frishwassertank entleeren und reinigen. Frishwassertank- und Auslasstankdeckel offen lagern (damit es trocknen kann)



Batterien laden (ca. 6h)



Achtung: Bei längerem nicht benutzen oder nicht laden der Maschine kann die Batterie Schaden nehmen!

Quick manual Wetrok Discomatic Samba



Before 1st Use

Connect the battery cables



Charge battery (app. 6 h)
Green lights means completely charged



Before every Use

1. Fill the freshwater tank with water and chemistry
(Recommend: Wetrok Ecofloor 1%)



2. Setting the handle in a comfortable position



3. A) Press main switch ON / OFF
B) Switch suction engine ON
C) Press switch C for water (lights only when brush engine is running)



4. Turn lever for the fresh water dosage (normal 45°)
5. Lower squeegee by pulling the handle down



6. Start to work with pressing and hold the left and/or the right button



During Usage

15 Liter water/chemistry ranges for 25 minutes with normal dosage of 45°

Attention: The recovery tank must be emptied upon each time the fresh water tank is refilled!

Fully charged the battery run time is up to 60 minutes (depending on floor and pad/brush type results may vary)

Attention: The battery must be recharged when the battery indicator is shown in the middle of the indicator field or when the machine stops working!



Attention: If the brush stops turning under load stop work immediately and charge the battery!

After Usage

Press main switch ON / OFF




Remove brush or pad drive disc from the machine and clean it



Remove squeegee clean



Empty dirty water from the recovery tank and clean the inside of the tank.
Store the tank with the cap removed to allow to dry

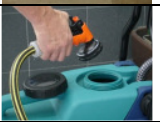

Empty fresh water tank and rinse with water and leave cap removed to allow tank to dry



Charge battery (app. 6 h)



Attention: If machine is not used for long periods of time without charging the battery the battery can be damaged permanently