



consulting concept **know-how** equipment products academy service

Wetrok Dosage System



The Wetrok Dosage System – easy, quick and safe

Easy, safe and quick dosage measuring is guaranteed with the new dosage system from Wetrok, especially for the various applications in the area of maintenance cleaning. For dosage measuring and filling – we have the appropriate device for every requirement. You can conveniently measure from the bottle to the pit stop with the scrubber-dryer the correct dosage.

Advantages of the Wetrok Dosage System

- Perfect cleaning results: Under- or overdosage is eliminated
- Exact consumption control
- Can also be used by inexperienced staff in no time at all
- Time-consuming training of various dosage types is no longer needed
- Light, handy application bottles
- Broad assortment of different dosage solutions for various applications



1

1 The **Dosage Centre 2/2** can simply be mounted on the wall and is immediately ready for use. With a patented quadruple on/off valve, it is suited for measuring doses of up to four products. Thanks to 15 different dosage inserts, various concentrations of 0.15 to 25 per cent are possible. This way an exact dosage is possible, both for bottles as well as for filling buckets/machines.

Little helpers that come on large – targeted measuring of doses with spray bottle, foam dispenser, Easy Dosage Bottle and Clean-Matic 1.25 E.




2



3



4

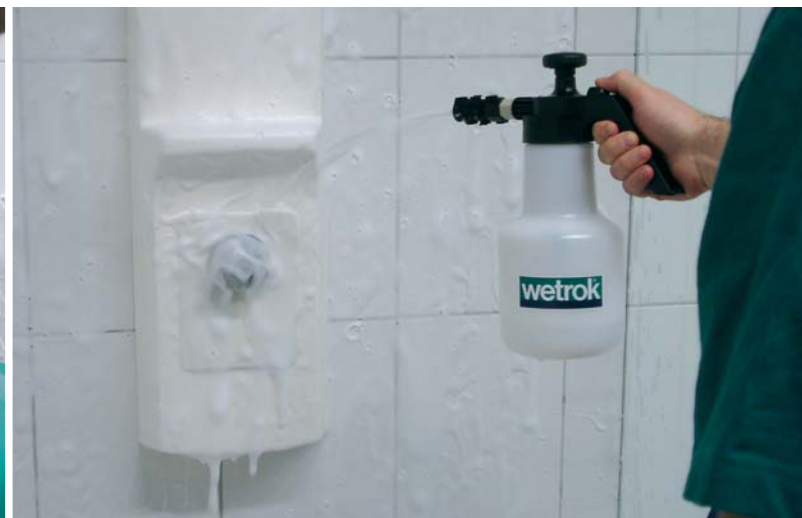

5

2 You never spray too much with the **spray bottle!** The cleaning solution spreads an evenly and economically measured dose while spraying. The bottle can be simply re-filled with cleaning solution. If you would rather use foam, simply put the appropriate foam top on.

3 New to our range is the **foam dispenser.** They are made of soft plastic and can be easily pressed together. The result is a firm foam that can ideally be distributed on the surface. This principle works without any propellant and is thus environmentally friendly.

4 The **Easy Dosage Bottle** loves to be turned on its head! In no time at all, the dosage lid fills up with 5 or 10 ml of cleaning agent. This way you can get an exact dose – depending on how badly soiled the surface is.

5 **Clean-Matic 1.25 E** with its 1.6 l content is particularly suited for larger surfaces because it guarantees long periods of use. The pressure relief valve and chemical-proof seals provide for safety and convenience.

And finally a pit stop with high speed! We also have the appropriate dosage device – FastFill 100 – for your scrubber-dryer, from 0 to 100 in 60 seconds.



Save time and money with **Wetrok FastFill 100**. Fill up the tank of your scrubber-dryer with the desired cleaning solution simply, conveniently and extremely quickly (100 l/min.). Pre-mixing the cleaning solution is not necessary and changing the cleaning agent is possible at any time. Wetrok Fast-Fill 100 can be plugged in anywhere and is slender in design, which saves space. You too will be convinced of this pit stop with high speed!

Here you can really get involved in the mixing!
































On the following three pages you will find a detailed overview about concentration, dosage inserts and aids as well as the application of basic, floor and sanitation cleaners.

	Concentration MC*	Dosage Centre 2/2**, 4 l/min	Dosage Centre 2/2**, 14 l/min	Easy Dosage Bottle, Dosage Lid 5 ml	Easy Dosage Bottle, Dosage Lid 10 ml	FastFill 100, Dosage nozzle, Ø mm	Application
Basic and floor cleaners							
Wetrok Antiwax B1 Item No. 11.100 (10 l)	1%			-	-	1.0	
Wetrok Antiwax forte B2 Item No. 11.000 (10 l)	1%			-	-	1.0	
Wetrok Indumat B3 Item No. 11.260 (10 l)	1%			-	-	-	
Wetrok Klar B8 Item No. 11.300 (10 l)	1%			-	-	-	
Wetrok Refor B9 Item No. 12.250 (10 l)	1%			-	-	1.0	
Maintenance Cleaners							
Wetrok Brill B10 Item No. 15.500 (10 l)	1%			-	-	1.0	
Wetrok Redur B11 Item No. 15.800 (10 l)	1%			-	-	1.0	
Wetrok Remop B12 Item No. 15.450 (10 l)	1%			-	-	1.0	
Wetrok 2care B21 Item No. 15.900 (10 l)	1%	-		-	-	1.0	
Wetrok Ceratop B22 Item No. 16.000 (10 l)	0.5%	-		-	-	1.0	
All-purpose cleaners							
Wetrok Alcosal A1 Item No. 12.200 (10 l)	2%			-	-	-	
	1-2%		-	-	-	-	
	30%		-	-	-	-	
	20%		-	-	-	-	
	1%			-	-	-	
Wetrok Reodor/-citro A4/A5 Item No. 12.100/12.120 (10 l)	1%			-	-	-	
Wetrok Resal A6 Item No. 11.400 (10 l)	1%			-	-	1.0	
	1-5%		-	-	-	-	
	30%	-	-	-	-	-	

* MC = Maintenance cleaning; only products that are diluted before being applied are listed. ** Colour corresponds to the provided dosage inserts.

	Concentration MC*	Dosage Centre 2/2**, 4 l/min	Dosage Centre 2/2**, 14 l/min	Easy Dosage Bottle, Dosage Lid 5 ml	Easy Dosage Bottle, Dosage Lid 10 ml	FastFill 100, Dosage nozzle, Ø mm	Application
High concentrates							
Wetrok Remop HK4 B13 Item No. 18.840 (10l)	0.2%	-	●	-	-	0.5	
Wetrok Alcosal HK5 A2 Item No. 18.855 (10l)	0.2%	-	●	-	-	-	
	0.8%	●	-	1 x	-	-	
	6%	●	-	6 x	3 x	-	
	4%	●	-	4 x	2 x	-	
Wetrok Resal HK6 A7 Item No. 18.860 (10l)	0.2%	-	●	-	-	0.5	
	0.8%	●	-	1 x	-	-	
	10%	●	-	(10 x)	5 x	-	
Wetrok Reocid HK7 S6 Item No. 18.870 (10l)	0.2%	-	●	-	-	-	
	6%	●	-	6 x	3 x	-	
	2%	●	●	-	2 x	1 x	-
Kitchen cleaners							
Wetrok Gastrosal K2 Item No. 12.920 (10l)	1%	●	●	-	-	-	
Wetrok Gastronet K3 Item No. 12.900 (10l)	0.2%	-	●	-	-	-	
Wetrok Porex K4 Item No. 11.700 (10l)	1%	●	●	-	-	1.0	
Products for the food/beverage industry and industrial cleaning							
Wetrok Ketovapor Foam 3 Chlor I3 Item No. 14.544 (10l)	3%	●	-	-	-	-	
Wetrok Ketacid CIP 3 I4 Item No. 14.504 (10l)	3%	●	-	-	-	2.0	
Wetrok Ketovapor Brillant I5 Item No. 11.520 (10l)	3%	●	-	-	-	-	
Wetrok Ketacid Brillant I7 Item No. 14.504 (10l)	3%	●	-	-	-	-	

* MC = Maintenance cleaning; only products that are diluted before being applied are listed. ** Colour corresponds to the provided dosage inserts.

		Concentration MC*	Dosage Centre 2/2**, 4 l/min	Dosage Centre 2/2**, 14 l/min	Easy Dosage Bottle, Dosage Lid 5 ml	Easy Dosage Bottle, Dosage Lid 10 ml	FastFill 100, Dosage nozzle, Ø mm	Application
Sanitary cleaners								
Wetrok Calexan S1	5%	●	○	-	-	-		 
Item No. 13.200 (10l)	20%	●	-	-	-	-		
Wetrok Caledor S3	1%	●	●	-	-	-		 
Item No. 13.700 (10l)	20%	●	-	-	-	-		
Wetrok Reocid S4	1%	●	●	-	-	-		 
Item No. 13.400 (10l)	20%	●	-	-	-	-		
	10%	●	-	-	-	-		
Wetrok Reocid 2000 S5	1%	●	●	-	-	-		 
Item No. 13.450 (10l)								
Wetrok Biosan S7	0.4%	-	●	-	-	-		 
Item No. 10.371 (10l)								
Wetrok Calefom I10	3%	●	●	-	-	-		
Item No. 11.522 (10l)	20%	●	-	-	-	-		
Wetrok Reofom I11	3%	●	●	-	-	-		
Item No. 11.502 (10l)	20%	●	-	-	-	-		











* MC = Maintenance cleaning; only products that are diluted before being applied are listed. ** Colour corresponds to the provided dosage inserts.



The right dosage and you're halfway there!

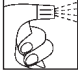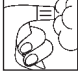



Every cleaning method requires a specific dosing aid. The following chart of possible combinations is to give you an overview while showing which dosing aid is best suited for which need.

Dosing aids for your cleaning method

Method		Material	Dosing aids	Description/Comment
Manual cleaning		Bucket Cloth	Dosage Centre 2/2 (14 l/min) Easy dosage bottle with HK Measuring cup 250 ml/1l	Filling of bucket
Wet mopping		Bucket on wheels with press Mop	Dosage Centre 2/2 (14 l/min) Easy dosage bottle with HK Measuring cup 250 ml/1l	Filling of bucket
Spray mopping/ Spot cleaning		Variwet flat mop	Dosage Centre 2/2 (4 l/min) Measuring cup 250 ml/1l	Filling of the pressurized bottle, max. volume 800 ml
Scrubber drying		Scrubber-dryer	FastFill 100 (100 l/min) Dosage Centre 2/2 (4 l/min)	Filling of the fresh water tank
Spraying		Spray bottle with spray top Cloth	Dosage Centre 2/2 (4 l/min) Easy dosage bottle with HK Measuring cup 250 ml	Spray tops colour-coded (blue)
Foaming		Spray bottle with foam top Cloth	Easy dosage bottle with HK Measuring cup 250 ml	Foam tops colour-coded (blue, yellow)
Foaming		Clean-Matic 1.25 E Cloth	Dosage Centre 2/2 (14 l/min) Measuring cup 250 ml/1l	for large area application e.g. showers
Foaming		Fixofoam	already integrated	for large area application e.g. showers various dosage inserts
Foaming		Fixomat with foam nozzle	Dosage Centre 2/2 (14 l/min) Measuring cup 250 ml/1l	for large area application e.g. showers
Foaming		Foam dispenser Cloth	Easy dosage bottle with HK Measuring cup 250 ml Outlet valve E	max. volume 450 ml

Those who have a choice have to stand the ordeal!

The following chart of all Wetrok dosage devices, as well as spraying and foaming devices, is to give you an overview of our diverse range. Properly employed, they will save you not only valuable cleaning agents but also time.

Product name	Description/Application	Options
<p>Wetrok Dosage Centre 2/2 Item No. 10.750</p> 	<p>With a patented quadruple on/off valve for measured dosage of up to 4 products:</p> <ul style="list-style-type: none"> - 2 x Filling of bottles (4 l/min) - 2 x Filling of bucket/machine (14 l/min) <p>Easy installation, several dosage centres are mountable in a row. Slender, modern Design, 15 different dosage inserts for concentrations of 0.15 to 25 per cent. Consistent dosage accuracy.</p>	
<p>Wetrok Easy Dosage Bottle Remop HK4, 6 x 1 l, Item No. 10.411 Alcosal HK5, 6 x 1 l, Item No. 10.412 Resal HK6, 6 x 1 l, Item No. 10.413 Reocid HK7, 6 x 1 l, Item No. 10.414</p> 	<p>Wetrok high concentrates in the practical new dosage bottles:</p> <ul style="list-style-type: none"> - with integrated dosage lid 5 ml - ergonomic handle eases handling - refillable in an eco-friendly manner - saves space and money since no surplus dosage is possible. 	<p>Dosage lid 10 ml Item No. 10.373</p>
<p>Wetrok Measuring cup Measuring cup 1 l, Item No. 10.733 Measuring cup 250 ml, Item No. 10.729</p> 	<p>So that your products are always correctly measured. Especially suited for filling narrow-necked bottles.</p>	
<p>Wetrok FastFill 100 Item No. 10.777</p> 	<ul style="list-style-type: none"> - Potentially record-breaking filling time (100 l/min.) - Automatic filling of water with overflow safeguard - Space-saving (H 115 cm, Ø 70 cm) - Can be plugged in anywhere (220 Volts) - Service radius up to 2.5 m - Perfectly dosed cleaning solution 	

Product name	Description/Application	Options
Wetrok Fixomat Item No. 10.132	Portable pressure spray device 7.5 l content, incl. hose and shaft Flow rate 0.4 l/min Resistant to acid, alkali and solvents	Foam nozzle for Fixomat Item No. 10.765
Wetrok Alcosal Spray Bottle Item No. 10.171 Wetrok Resal Spray Bottle Item No. 10.172	Pressurised 500 ml spray bottles with blue spray top. Colour-coded	Foam top blue* Item No. 10.178
Wetrok Reocid Spray Bottle with foam top Item No. 10.169 Wetrok Calefom Spray Bottle with foam top Item No. 10.167 Wetrok Reofom Spray Bottle with foam top Item No. 10.168	Pressurised 500 ml spray bottles with foam top*. – no aerosol formation – slightly clinging foam – colour-coded	
Wetrok Calexan Foam Dispenser Item No. 10.150 Wetrok Caledor Foam Dispenser Item No. 10.173 Wetrok Alcosal Foam Dispenser Item No. 10.174 Wetrok Reocid Foam Dispenser Item No. 10.176	Pressurised 500 ml foam dispenser, Overhead usage possible: – no aerosol formation – firm foam – easily to apply and spread – colour-coded	
Wetrok Clean-Matic 1.25 E Item No. 10.800	Portable pressurised hot-water tank foam device with 1.6 l content, pressure relief valve and foam nozzle.	
Wetrok Fixofoam Item No. 10.811	Portable pressure accumulator foam device with 1.6 l content, pressure relief valve. Foam gun with water connexion, plastic con- tainer with 1.4 l content can be screwed on. Injector principle with various dosage inserts. Flow rate 9 l/min.	

* Overhead usage is possible

Wetrok AG Steinackerstrasse 62, CH-8302 Kloten
Tel +41 43 255 51 51, Fax +41 43 255 51 52, www.wetrok.ch

Wetrok Ltd. Unit 4, Easter Court, Europa Boulevard,
Warrington, GB-Cheshire WA5 7ZB
Tel +44 1925 711222, Fax +44 1925 711333, www.wetrok.uk.com

Wetrok GmbH Maybachstrasse 35, D-51381 Leverkusen
Tel +49 217 139 80, Fax +49 217 139 81 15, www.wetrok.de

