

# General instructions for cleaning and care

## no. 28 Synthetic and natural stone, acid-susceptible (structured profile)





















**cleaning system without treatment  
end of construction**

object \_\_\_\_\_  
address \_\_\_\_\_  
room classification \_\_\_\_\_

date \_\_\_\_\_  
customer \_\_\_\_\_  
representative \_\_\_\_\_

work process: select one work stage from each number

cleaning method	* recommendations chemical products	dosage	* recommendations pad / brush / mop / cloth	recommendations machine / tool	comments
1  dry vacuum cleaning			V <b>Dust roller nozzle</b> <b>Neverclog filter without ring</b> <b>Filter bag with ring</b>	<b>Twinvac /</b> Duovac / Silento /	large areas: sweeping
2  dusting damp mopping			<b>Masslinn 2000/Floorwit white</b> Multi squeegee/	<b>Balit Varifix/</b> Balit/	
<b>cleaning without maintenance care product (if coating follows)</b>					
3  wet mopping direct method	<b>Ecofloor</b> V Reshine V Antiwax forte	<b>0.5 - 1%</b> 3 - 5% 2 - 5%	<b>Micro-Mop Top/</b> Microsol mop/	<b>Socar / Drewell</b>	
3  scrubber drying direct method	<b>Ecofloor</b> V Reshine V Antiwax forte	<b>0.5 - 1%</b> 3 - 5% 2 - 5%	 <b>Microsol fibre pad/</b>  Scrubbing brush PP/	<b>Duomatic / Laser</b> Mambo / Samba Sprinter / iMatic	
3  wet scrubbing and wet vacuuming	<b>Reshine</b> Antiwax forte	<b>3 - 5%</b> 2 - 5%	 <b>Microsol fibre pad/</b>  Scrubbing brush washbeton/	<b>Monomatic I /</b> <b>Watertank</b> <b>Duovac /</b>	heavily soiled  
4  stain removal	See cleaning instruction no 41				if needed
<b>cleaning with maintenance care (first protective treatment with same product as in maintenance cleaning)</b>					
5  wet mopping direct method	<b>Redur</b> F Brill	<b>3%</b> 3 - 5%	<b>Micro-Mop Top/</b> Microsol mop/ Flat mop/	<b>Socar / Drewell</b>	Brill should be used with flat mop only 
5  scrubber drying direct method	<b>Redur</b> F Brill	<b>3%</b> 3 - 5%	 <b>Microsol fibre pad/</b>  Scrubbing brush PP/	<b>Duomatic / Laser</b> Mambo / Samba Sprinter / iMatic	

\* basic treatment / structure: B: coated / C: waxed / D: oiled / E: sealed / F: untreated / G: maintenance care product / P: polishing / S: structured / V: heavily soiled

**important:** Sensitive or resistant against acid means against amidosulphuric acid

# General instructions for cleaning and care

## no.28 Synthetic and natural stone, acid-susceptible (structured profile)



### maintenance cleaning

object \_\_\_\_\_

date \_\_\_\_\_

























address \_\_\_\_\_

customer \_\_\_\_\_

work process: select one work stage from each number

room classification \_\_\_\_\_

representative \_\_\_\_\_

	cleaning method	freq uenc	* recommendations chemical products	dosage	* recommendations pad / brush / mop / cloth	recommendations machine / tool	comments
1	 dusting damp mopping				<b>Masslinn / Floorwit</b> Synthetic fur	<b>Balit Varifix/</b> Balit/	
1	 dry vacuum cleaning				V S <b>Dust roller nozzle</b> Dust roller nozzle	<b>Monovac /</b> Scuba	
1	 vacuum sweeping sweeping					<b>Speedmatic Twister</b> Turbo Sweep	large areas:  sweeping
2	 chewing gum removal		<b>Karpfrost</b> Karpotek	<b>100%</b>			if needed 
<b>cleaning without maintenance</b>							
3	 wet mopping direct method		<b>Ecofloor</b> Reshine Biosan	<b>0.5 - 1%</b> 1 - 2% 0.8 - 1.5%	<b>Micro-Mop Top/</b> Mop Variwet	<b>Wetbox system</b> Socar / Drewell Variwet / B. Varifix	
3	 scrubber drying direct method		<b>Ecofloor</b> Reshine Libero	<b>0.5 - 1%</b> 1 - 2% 0.5 - 3%	V  <b>Microsol fibre pad/</b>  Scrubbing brush PP/	<b>Duomatic / Laser</b> Mambo / Samba Sprinter / iMatic	
<b>cleaning with maintenance</b>							
3	 wet mopping direct method		<b>Redur</b> F Brill	<b>1%</b> 1 - 2%	<b>Micro-Mop Top/</b> Mop Variwet Flat mop/	<b>Wetbox system</b> Socar / Drewell Variwet / B. Varifix	Brill should be used with flat mop only
3	 scrubber drying direct method		<b>Redur</b> F Brill	<b>1%</b> 1 - 2%	V  <b>Microsol fibre pad/</b>  Scrubbing brush PP/	<b>Duomatic / Laser</b> Mambo / Samba Sprinter / iMatic	

\* basic treatment / structure: B: coated / C: waxed / D: oiled / E: sealed / F: untreated / G: maintenance care product / P: polishing / S: structured / V: heavily soiled

**important:** Sensitive or resistant against acid means against amidosulphuric acid

# General instructions for cleaning and care

## no.28 Synthetic and natural stone, acid-susceptible (structured profile)



### interim cleaning

object \_\_\_\_\_

date \_\_\_\_\_
















address \_\_\_\_\_

customer \_\_\_\_\_

work process: select one work stage from each number

room classification \_\_\_\_\_

representative \_\_\_\_\_

	cleaning method	freq uenc	* recommendations chemical products	dosage	* recommendations pad / brush / mop / cloth	recommendations machine / tool	comments
1	 dusting damp mopping	<input type="checkbox"/>			B <b>Masslinn 2000/Floorwit white</b> Synthetic fur	<b>Balit Varifix/</b> Balit/	
1	 dry vacuum cleaning	<input type="checkbox"/>			V <b>Dust roller nozzle</b>	<b>Monovac /</b> Scuba	
1	 vacuum sweeping sweeping	<input type="checkbox"/>				<b>Speedmatic Twister</b> Turbo Sweep	large areas: <input type="checkbox"/> 2 m
2	 chewing gum removal	<input type="checkbox"/>	<b>Karpfrost</b> Karpotek	<b>100%</b>			if needed <input type="checkbox"/>
<b>cleaning without maintenance</b>							
3	 wet mopping indirect method	<input type="checkbox"/>	<b>Reshine</b> G Antiwax forte	<b>3 - 5%</b> 2 - 5%	<b>Micro-Mop Top/</b> Mop Microbrush/	<b>Wetbox system</b> Socar / Drewell	 
3	 scrubber drying indirect method	<input type="checkbox"/>	<b>Reshine</b> G Antiwax forte	<b>3 - 5%</b> 2 - 5%	 <b>Microsol fibre pad/</b>  Scrubbing brush washbeton/ V  Scrubbing brush PP/	<b>Duomatic / Laser</b> Mambo / Samba Sprinter / iMatic	 
4	 wet mopping direct method	<input type="checkbox"/>	<b>Biosan</b>	<b>3%</b>	<b>Micro-Mop Top/</b> Mop Variwet	<b>Socar / Drewell</b> Wetcar / Drewell Variwet / B. Varifix	if needed, bad smell could be removed with <input type="checkbox"/> 

\* basic treatment / structure: B: coated / C: waxed / D: oiled / E: sealed / F: untreated / G: maintenance care product / P: polishing / S: structured / V: heavily soiled

**important:** Sensitive or resistant against acid means against amidosulphuric acid  
For initial cleaning after interim cleaning, see "initial cleaning".

# General instructions for cleaning and care

## no.28 Synthetic and natural stone, acid-susceptible (structured profile)



### basic cleaning

object \_\_\_\_\_

date \_\_\_\_\_

































address \_\_\_\_\_

customer \_\_\_\_\_

work process: select one work stage from each number

room classification \_\_\_\_\_

representative \_\_\_\_\_

	cleaning method	freq uenc	* recommendations chemical products	dosage	* recommendations pad / brush / mop / cloth	recommendations machine / tool	comments
1	 dusting  damp mopping	<input type="checkbox"/>			B <b>Masslinn 2000/Floorwit white</b> Synthetic fur	<b>Balit Varifix/</b> Balit/	
1	 dry vacuum cleaning	<input type="checkbox"/>			V <b>Dust roller nozzle</b>	<b>Monovac /</b> Scuba	
2	 chewing gum removal	<input type="checkbox"/>	<b>Karpfrost</b> Karpotek	<b>100%</b>			if needed 
<b>cleaning without maintenance</b>							
3	 wet scrubbing and wet vacuuming	<input type="checkbox"/>	<b>Antiwax forte</b> G Rewit 2000 B Relino	<b>30 - 50%</b> 10 - 20% 20 - 50%	 <b>Microsol fibre pad/</b>  Scrubbing brush washbeton/ V  Scrubbing brush PP/	<b>Monomatic I /</b> <b>Watertank</b> <b>Duovac /</b>	  
3	 scrubber drying indirect method	<input type="checkbox"/>	<b>Antiwax forte</b> G Rewit 2000 B Relino	<b>30 - 50%</b> 10 - 20% 20 - 50%	 <b>Microsol fibre pad/</b>  Scrubbing brush washbeton/ V  Scrubbing brush PP/	<b>Duomatic / Laser</b> Mambo / Samba Sprinter / iMatic	   
4	rinsing   	<input type="checkbox"/>	<b>pure water</b>		 <b>Microsol fibre pad/</b>  Scrubbing brush PP/ V  Scrubbing brush washbeton/	<b>Monomatic I /</b> <b>Duovac /</b> Duomatic / Laser	 
5	 stain removal	<input type="checkbox"/>	See cleaning instruction no 41				if needed
6	 wet mopping direct method	<input type="checkbox"/>	<b>Biosan</b>	<b>3%</b>	<b>Micro-Mop Top/</b> Mop Variwet	<b>Socar / Dwell</b> Wetcar / Dwell Variwet / B. Varifix	if needed, bad smell could be removed with  

\* basic treatment / structure: B: coated / C: waxed / D: oiled / E: sealed / F: untreated / G: maintenance care product / P: polishing / S: structured / V: heavily soiled

**important:** Sensitive or resistant against acid means against amidosulphuric acid  
Use a coin or a key to do a scratch test, to check if all the protective coating has been removed.

# General instructions for cleaning and care

## no. 28 Synthetic and natural stone, acid-susceptible (structured profile)



### protective treatment

object \_\_\_\_\_

date \_\_\_\_\_















address \_\_\_\_\_

customer \_\_\_\_\_

work process: select one work stage from each number

room classification \_\_\_\_\_

representative \_\_\_\_\_

	cleaning method	* recommendations chemical products	dosage	* recommendations pad / brush / mop / cloth	recommendations machine / tool	comments
1	 dusting  damp mopping			B Masslinn 2000/Floorwit white Synthetic fur	Balit Varifix/ Balit/	
<b>pore filling (only if necessary)</b>						
2	 pore filling	F Porosol	100%	Cover for Florfix Flat mop/	Florfix/ Drewell/ Buket plast 22l	If necessary, one layer on porous surface  
<b>coating</b>						
3	 coating	Stoner Mepol HM	100% 100%	Cover for Florfix Flat mop/	Florfix/ Drewell/ Buket plast 22l	1 - 3 thin layers  
3	 waxing	Polish	100%	Cover for Florfix Flat mop/	Florfix/ Drewell/ Buket plast 22l	1 - 3 thin layers  
<b>coating</b>						
2	 impregnation	F Imprasol	100%	Cover for Florfix Flat mop/	Florfix/ Drewell/ Buket plast 22l	apply first layer with care  

\* basic treatment / structure: B: coated / C: waxed / D: oiled / E: sealed / F: untreated / G: maintenance care product / P: polishing / S: structured / V: heavily soiled

**important:** Sensitive or resistant against acid means against amidosulphuric acid  
 before protective treatment: the floor must be perfectly stripped, thoroughly rinsed and completely dry!  
 Let dry protection treatment completely between the layers and before use  
 do not coat impregnated floors  
 Process treatment of protection: see description of method  
 For initial cleaning with maintenance cleaner after protective treatment, see "initial cleaning".

## General instructions for cleaning and care


### no. 28 Synthetic and natural stone, acid-susceptible (structured profile)



#### Information about the flooring



Wetrok AG cannot accept any liability for damages due to improper use.  
For security information, see the safety data sheet at [www.wetrok.ch](http://www.wetrok.ch).  
Wear protection: gloves, safety goggles, work clothes  
Follow the information and remarks on the label, product data sheet and material safety data sheet.  
The product data sheet describes the product and gives information about its application, storage. See [www.wetrok.ch](http://www.wetrok.ch)  
The recommended colours of pad and brushes consist to the actual wWetrok product range  
Follow the special cleaning and care instructions of the floor manufacturer  
The cleaning and care instructions are recommendations and suggestions and apply to floorings in object quality.

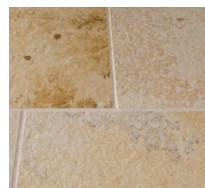

#### **Do not coat structured floor coverings.**

Soft stone, e.g. marble, limestone (Jura-limestone, concha-limestone), Solnhofen stone, travertine, slate or sandstone is sensitive to acid.

**Sensitive or resistant against acid means against amidosulphuric acid**

**Soft stone is sensitive to scratches, only use suitable pads and brushes.**

**Plastic-bonded synthetic stone is sensitive to solvents.**

**Most grouts are acid sensitive. Soak the joints well before using acidic cleaners.**



There must be no coating in the open air and in wet rooms. Danger of slipping!

Synthetic stone is a blend of coloured stone chippings in cement or bound with a resin.

Natural stone is a 100% natural product consisting of minerals such as quartz, feldspar, calcite, selenite, hornblende or mica.

The colour and the appearance of the stone varies depending on its origin.

Cast stone is laid as plates and terrazzo is poured and ground across the entire surface.

Distinguishing feature: cement-bound synthetic stone acid assay: apply a little basic sanitary cleaner to the magnesite covering. Foams up: material damage!



Remove loose dirt before every cleaning, damp mop smooth floors and vacuum structured floors.

Cleaning agents and surface treatments may alter the appearance and properties of a floor's surface.

Test on an inconspicuous spot to find which product is suitable for your requirements.

Test beforehand on an inconspicuous spot to see if the cleaning agent or surface treatment damages the floor.

Dirt-trapping zones, incl. dirt-trapping mats (Wetrok Gardamat) in the entrance, at least 7m long, greatly reduce the amount of dirt tracked into the building.

If you have any questions, please don't hesitate to contact us.

For training courses, contact the Wetrok Academy, tel. +41 (0)43 255 51 43 or [academy@wetrok.ch](mailto:academy@wetrok.ch).